


راهنمای تنظیمات مودم TP-Link 8951

(۱) جهت انجام تنظیمات مورد نیاز و وارد کردن مشخصات سرویس اینترنت لازم است که به کنسول مودم متصل شوید. یک صفحه مرورگر باز کنید و IP پیش فرض مودم را در Address Bar جستجو کنید: ۱۹۲،۱۶۸،۱،۱



(۲) User و Password ورود به تنظیمات مودم را admin وارد کنید:

A screenshot of a login dialog box titled "Connect to 192.168.1.1". The dialog box has a blue header with a question mark and a close button. Below the header is a key icon. The main area is light beige and contains the text "DSL Router". There are two input fields: "User name:" with a dropdown menu showing "admin" and "Password:" with a masked field of six dots. Below the password field is a checked checkbox labeled "Remember my password". At the bottom are "OK" and "Cancel" buttons.

(۳) پس از وارد کردن User و Password صفحه اصلی تنظیمات مودم به صورت زیر نمایش داده می شود:

Status

- Quick Start
- Interface Setup
- Advanced Setup
- Access Management
- Maintenance
- Status**
- Help

- Device Info
- System Log
- Statistics

Device Information

Firmware Version : 6.0.0 Build 141027 Rel.23356
 MAC Address : c0:4a:00:a8:da:e3

LAN

IP Address : 192.168.1.1
 Subnet Mask : 255.255.255.0
 DHCP Server : Enabled

Wireless

Current Connected Wireless Clients number is 0

ID	MAC

WAN

PVC	VPI/VCI	IP Address	Subnet	GateWay	DNS Server	Encapsulation	Status
PVC0	1/32	N/A	N/A	N/A	N/A	Bridge	Down
PVC1	0/33	N/A	N/A	N/A	N/A	Bridge	Down
PVC2	0/35	N/A	N/A	N/A	N/A	Bridge	Down
PVC3	0/100	N/A	N/A	N/A	N/A	Bridge	Down
PVC4	8/35	N/A	N/A	N/A	N/A	Bridge	Down
PVC5	8/48	N/A	N/A	N/A	N/A	Bridge	Down
PVC6	0/38	N/A	N/A	N/A	N/A	Bridge	Down


ADSL

ADSL Firmware Version : FwVer:3.20.17.0_TC3087 HwVer:T14.F7_11.2
 Line State : Down
 Modulation : N/A
 Annex Mode : N/A


	Downstream	Upstream	
SNR Margin :	N/A	N/A	db
Line Attenuation :	N/A	N/A	db
Data Rate :	N/A	N/A	kbps
Max Rate :	N/A	N/A	kbps
POWER :	N/A	N/A	dbm
CRC :	N/A	N/A	

های وب HiWEB

۴) بالای صفحه گزینه ی Quick Start را انتخاب کنید و سپس از وسط صفحه گزینه Run Wizard را انتخاب کنید:

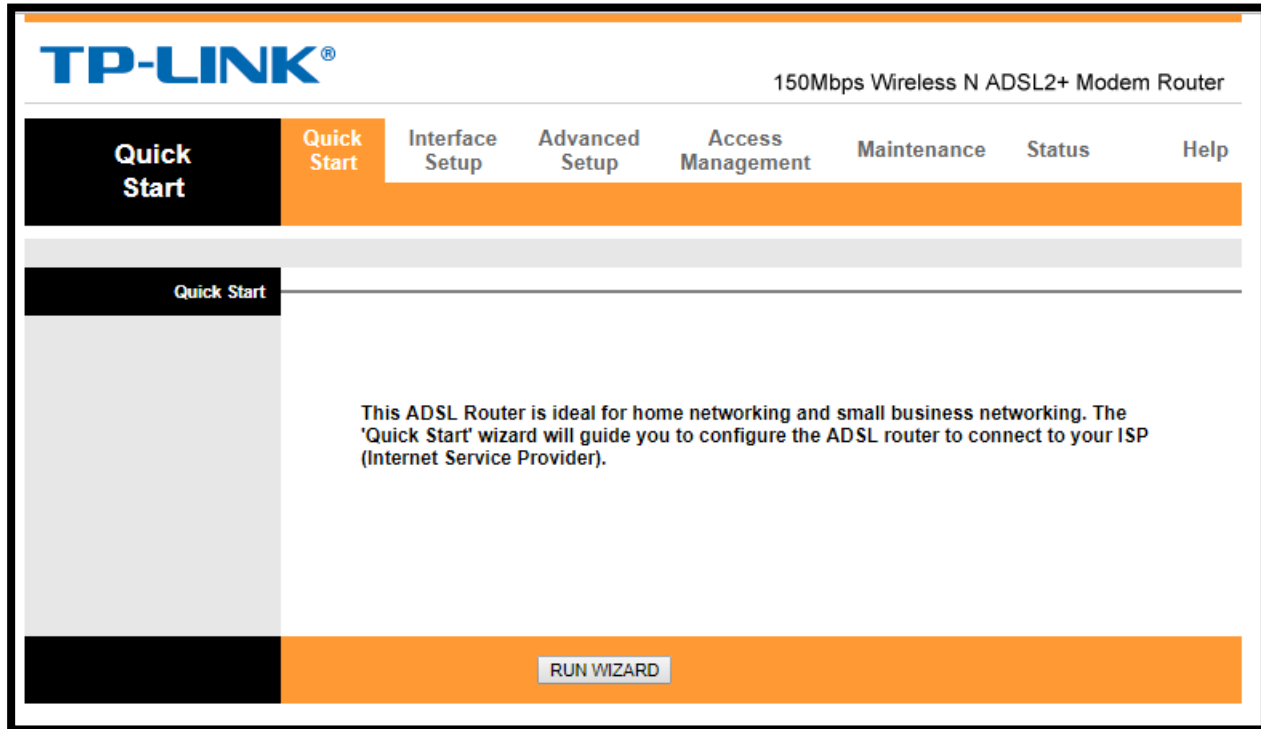

۵) در صفحه جدید بروی گزینه Next کلیک کنید:

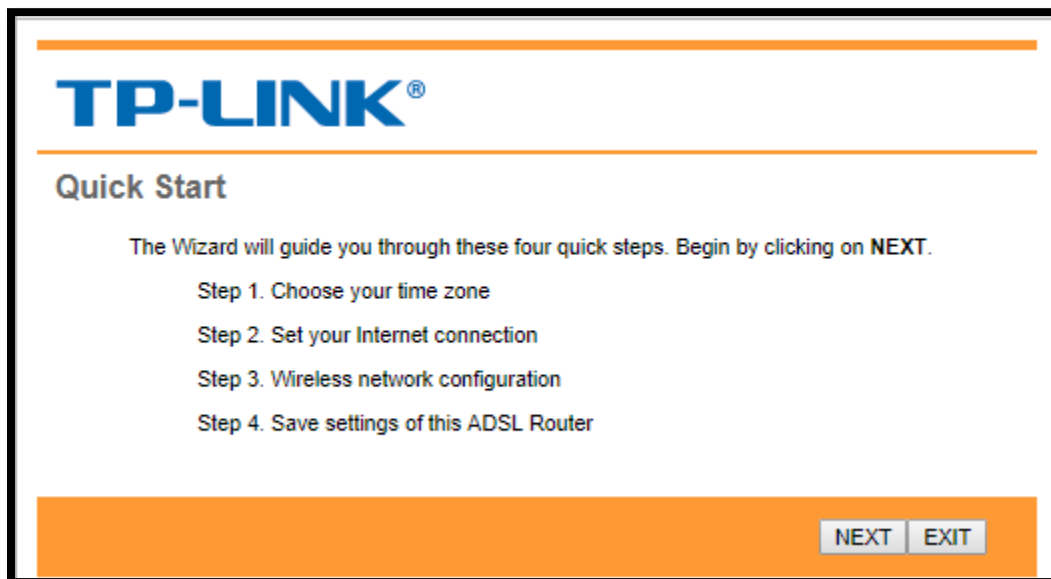

۶) در این صفحه منطقه زمانی تهران را در لیست انتخاب و روی Next کلیک کنید

The screenshot shows the TP-LINK Quick Start - Time Zone configuration screen. At the top is the TP-LINK logo. Below it is the title "Quick Start - Time Zone". A text instruction reads: "Select the appropriate time zone for your location and click NEXT to continue." Below this is a dropdown menu with the selected option "(GMT+03:30) Tehran". At the bottom right, there are three buttons: "BACK", "NEXT", and "EXIT".

۷) گزینه PPPoE/PPPoA را انتخاب کنید:

The screenshot shows the TP-LINK Quick Start - ISP Connection Type configuration screen. At the top is the TP-LINK logo. Below it is the title "Quick Start - ISP Connection Type". A text instruction reads: "Select the Internet connection type to connect to your ISP. Click NEXT to continue." Below this are four radio button options with their descriptions:

- Dynamic IP Address: Choose this option to obtain a IP address automatically from your ISP.
- Static IP Address: Choose this option to set static IP information provided to you by your ISP.
- PPPoE/PPPoA: Choose this option if your ISP uses PPPoE/PPPoA. (For most DSL users)
- Bridge Mode: Choose this option if your ISP uses Bridge Mode.

At the bottom right, there are three buttons: "BACK", "NEXT", and "EXIT".

۸) در این صفحه User و Password که شرکت های وب در اختیار شما قرار داده را در کارد مربوطه وارد کنید. مقادیر VPI:0 و VCI:35 را در فیلدهای مربوطه وارد سپس روی Next کلیک کنید.

TP-LINK®

Quick Start - PPPoE/PPPoA

Enter the PPPoE/PPPoA information provided to you by your ISP. Click **NEXT** to continue.

Username:

Password:

VPI: (0~255)

VCI: (1~65535)

Connection Type:

BACK **NEXT** **EXIT**

۹) به منظور انجام تنظیمات Wireless در این صفحه در قسمت SSID نامی را برای شبکه بیسیم خود برگزینید، مودم به صورت پیش فرض کلمه عبوری جهت استفاده از سرویس Wireless ندارد و میبایست جهت محافظت از سرویس خود و جلوگیری از ورود و استفاده افراد غیر مجاز در قسمت Authentication Type گزینه WPA2-PSK را انتخاب کنید پس از انجام این تغییر Box جدیدی جهت وارد کردن Password به نام Pre-Shared key باز میشود یک رمز بین ۸ تا ۶۳ کارکتری وارد کنید سپس روی دکمه Next پایین صفحه کلیک کنید:

TP-LINK®

Quick Start - Wlan

You may enable/disable Wlan, change the Wlan SSID and Authentication type in this page. Click **NEXT** to continue.

Access Point : Activated Deactivated

SSID :

Broadcast SSID : Yes No

Authentication Type : ▼

Encryption : ▼

Pre-Shared Key : (8-63
ASCII characters or 64 hexadecimal characters)

۱۰) در این صفحه روی Next کلیک کنید:

TP-LINK®

Quick Start Complete !!

The Setup Wizard has completed. Click on **BACK** to modify changes or mistakes. Click **NEXT** to save the current settings.

۱۱) تنظیمات به پایان رسید روی CLOSE کلیک کنید:

